

**Components:**  
**SC662402W**  
**Panels:**



(1) Floor Panels  
 (open hole sockets)



(2) 1st and 2nd Levels  
 (closed hole sockets)

**Legs:**  
 (6) - 12"  
 (6) - 24"

**Accessories:**  
 (3) - Mobile Bars



# STEPMASTER™ ASSEMBLY INSTRUCTIONS

## SC662402W

### 2 SHELF MOBILE WALL UNIT

Oil all sockets before assembly


#### Fully Assembled

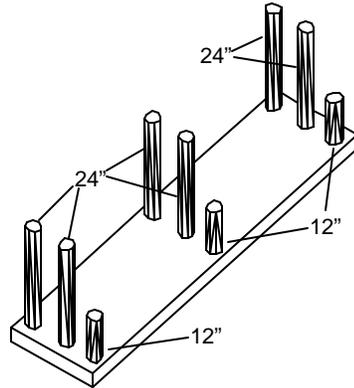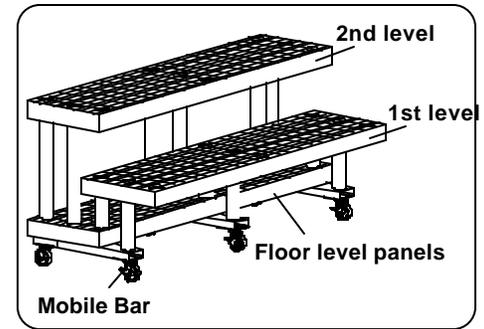

#### Step 1

##### Floor level


Lay floor panel (**open hole sockets**) in position and place legs as shown. (Make sure legs go through to ground).

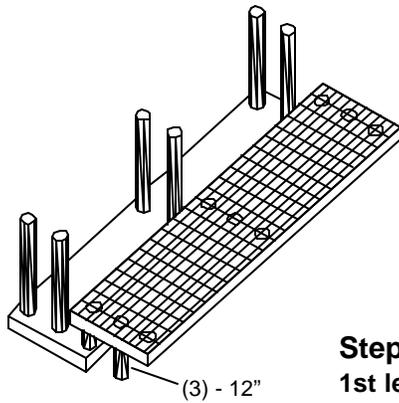

#### Step 2

##### 1st level

Invert middle panel (**closed hole sockets**) and insert **12" legs** in middle row of sockets. Next, place the panel in position as shown.

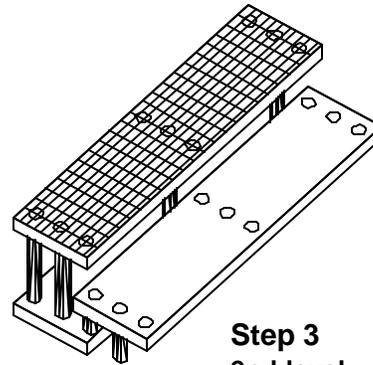

#### Step 3

##### 2nd level

Position the top panel (**closed hole sockets**) on **24" legs** in floor panel overhanging outside edge as shown. (Make sure panels are pushed all the way down.)

## Mobile Bar

#### Step 5

##### Mobile Bar

Position fixture on its back side and insert the stems of the mobile bar inside the sockets as shown.

Brakes go to the front of the fixture.

